

WARRANTY POLICY

At Gear Beast, our first priority is customer satisfaction. We offer a One-Year Warranty on all Gear Beast products purchased directly from Gear Beast or an authorized reseller. Our Warranty Policy is straightforward. At our discretion we will repair or replace your product, with any defect in manufacturing workmanship (but not due to customer damage, abuse or misuse). The customer is responsible for the cost of shipping the defective product to us. Our Warranty does not include connected devices, incidental and/or consequential damages of any kind. For further information regarding our Warranty Policy, please visit our website at www.gearbeast.com. Our Warranty Policy is only applicable to the original owner of the product.

Defy Limits.

Just as you're inspired to stay active, set new goals, and realize your full potential, Gear Beast continually strives to create innovative and smart solutions to enhance your active lifestyle and help you defy limits. From triathlons to your daily fitness routine to a walk along the beach, Gear Beast is there in stride to propel you forward to do more. Our leading-edge designs are appealing both in function and fashion, and with a focus on high-quality products, we offer one of the best warranty programs in the industry.

Become your best with the greatest gear, and we'll defy limits together. Get out. Get moving.



RUNNING BACKPACK



IMPORTANT

Please read enclosed instructions before using this product.



Using the Running Backpack

1 With both of the straps buckled, pull the Adjustment Slides towards the Buckles to fully increase the slack on each strap. Then place one of your arms through the strap loop and rest it on the top of your shoulder.



2 Pull the other strap loop behind your back and over your opposite shoulder. Make sure that the Gear Beast logo on the pouch is facing up.




3 Pull down on the Strap Adjustment Slides until the Backpack is snug against your body. The Backpack should be tight enough so that the straps will not slip off of your shoulders during normal activity.



4 When the Backpack is being worn correctly, the Phone/Accessory Pouch should be positioned between your shoulder blades and it will not move or bounce during normal activity.



5 To remove the Backpack you can either slide the elastic strap off of one shoulder and then slide it off of the other OR you can unbuckle one shoulder strap and then slide the opposite side strap off. Regardless of the method used to remove your Backpack, make sure to retain your grip on at least one strap so that the pack, and its contents, do not fall causing potential damage to your phone or other items.

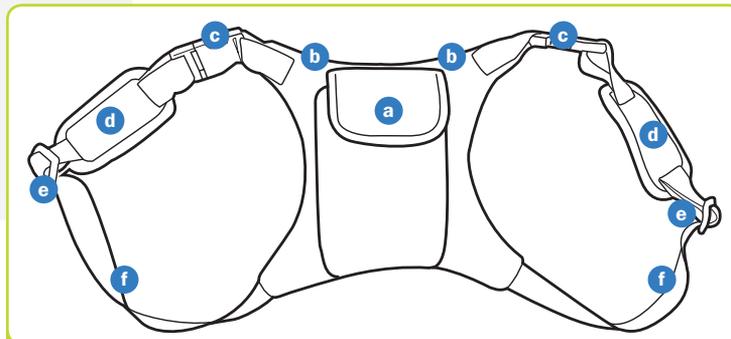

a. Phone/Accessory Pouch with ID and Card Holder
b. Headphone Openings
c. Durable Non-Pinch Buckles

d. Shoulder Pads
e. Strap Adjustment Slides
f. Elastic Straps